



## Installation Manual SOLA Series

 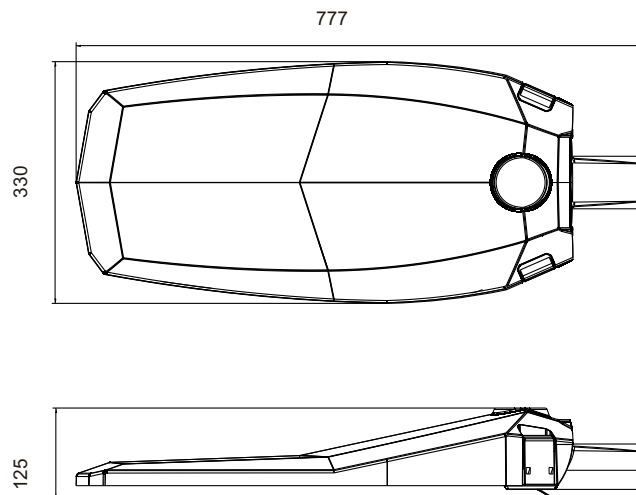


### Technical Parameters

Product Specifications	70/90/110	140/190
Input Voltage	AC100-240V	
Power Frequency	50/60Hz	
CRI	Ra70/Ra80	
IPRating	IP66	
Outlook Dimensions	777x330x125mm	1019x440x145mm
Luminaire Net Weight	7.5Kg	12.5Kg
System Efficacy	130(±5%)LM/W(CCT=4000K)	
Power Factor	> 0.95	
Lifespan	≥ 100000Hrs ( LM80@25°C )	
Working Temperature	-40 ~ +50°C	
Working Humidity	15%~90%RH	
Storing Temperature	-40~+70°C	
Installation caliber	Φ 48mm / Φ 60mm	

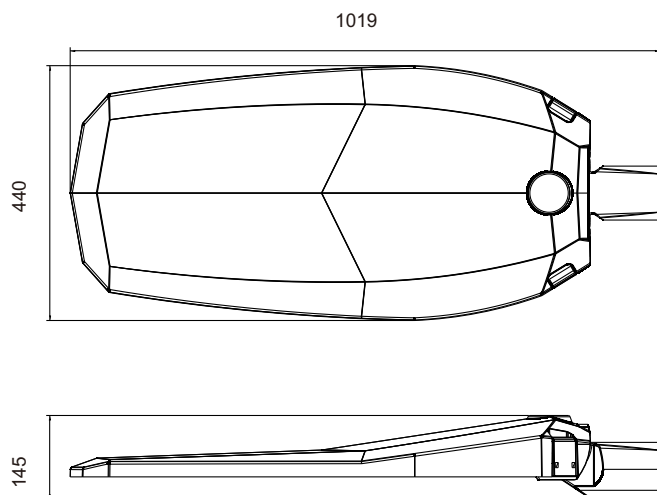

#### A. Class I Standard









#### A. Class II Standard



### Wiring:

1. Connect supply wires to luminaire wire leads per the wiring diagram using methods that comply with all applicable codes.
2. Turn power on.

## **Mounting**

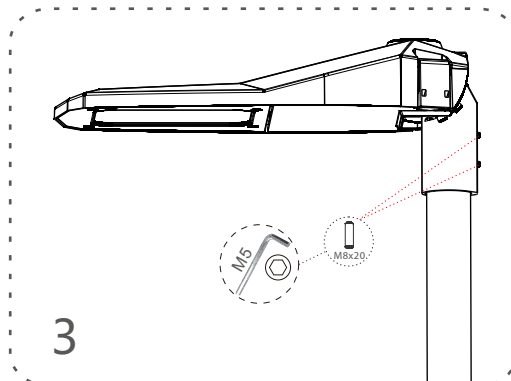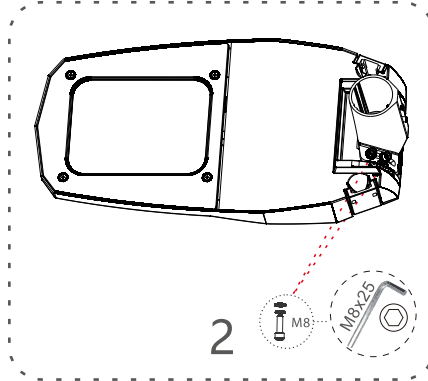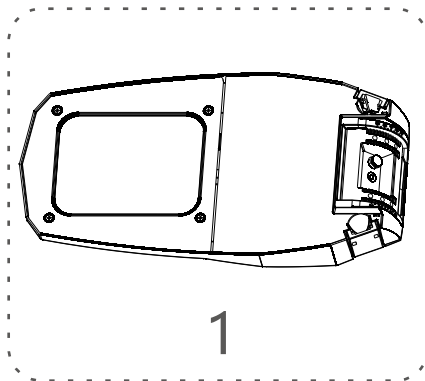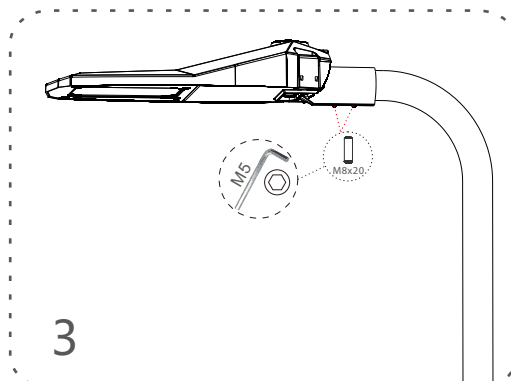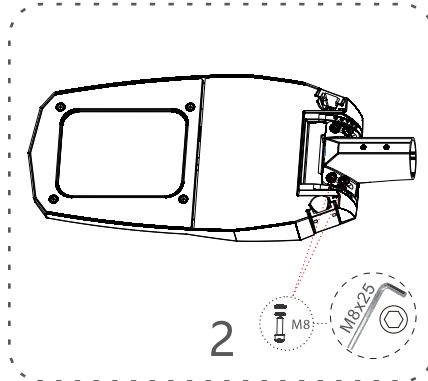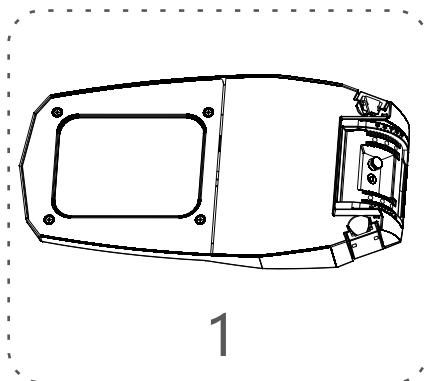

**The luminaire shall only be repaired or maintained by the manufacturer or his service agent or a qualified electrician.**



**Caution, risk of electric shock**



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collect on systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.